

dnsys X1

User Manual

1 About Dnsys

Thank you for choosing the Dnsys X1. We are very excited to have you experience the new world of powered exoskeletons with us. Please read this **User Manual** before use to ensure you can fully enjoy the fun that the Dnsys X1 brings to you.

2 Quick Guide

Step 1: Scan the code and download the latest app before using the device.



Step 2: Watch the 'First-Time Wearing Guide' video before getting started.

Step 3: After watching the video, go ahead and follow the app's guidance to activate your device, please ensure that you understand and agree the terms of user agreement before activation.


Step 4: Complete the '**Beginner's Tutorial**'. Please note: Dnsys X1's full functionality will be unlocked only after you complete the beginner's tutorial. Once unlocked, you will receive this pop-up notification.

Congratulations on completing the beginner's tutorial, all device functions are now unlocked!


Sure

3 External Component Identification

Right-Front View

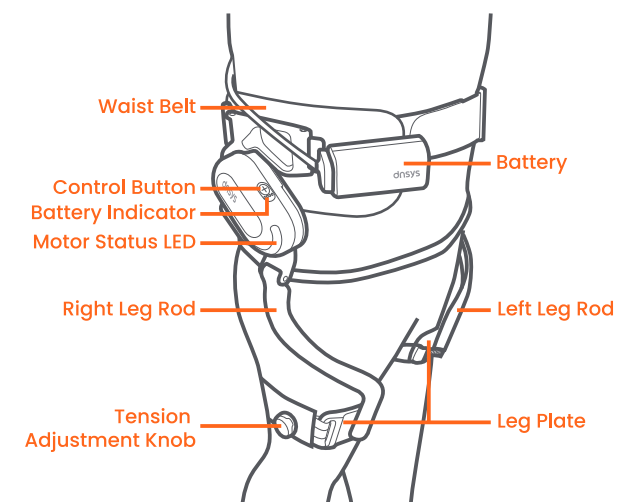


Left-Rear View

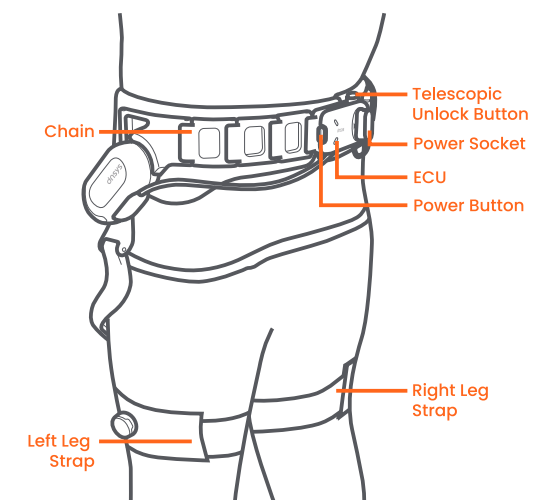 

4 First Time Use

 
4-1 Connect the battery

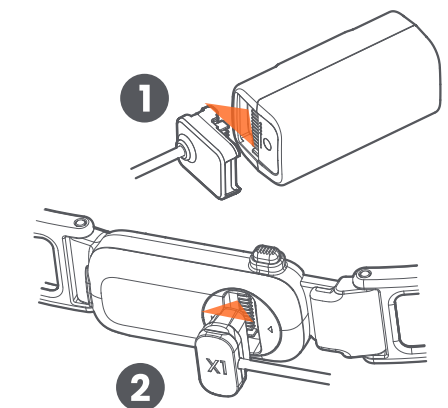

4-2 Download the Dnsys App and get your Dnsys Account



 4-3 Turn on the device

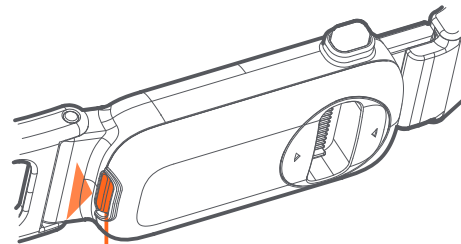

Long Press
the Power Button

4-4 Connect to your device and follow the guide to setting the exoskeleton. We have a detailed tutorial for you, **Before use Dnsys X1 by yourself, please be sure you have finish all the tutorial.**



4-5 To enter work mode, please **quickly double-click** the power button on the back (the motor light changes from steady white to a pulsating white). Then, use the left and right '+' and '-' buttons to set the device into work mode.

4-6 Overviews of Modes:
Eco, **Sport**, and **Boost** modes offer assistance.
Aqua and **Aqua+** modes provide resistance.

Eco: Provides gentle support
Sport: Provides moderate support
Boost: Provides maximum support
Aqua: Adds resistance
Aqua+: Adds stronger resistance

5 Battery Protection

5-1 After getting the device, remember to give it a full charge before diving into using it.

5-2 To avoid the battery overcharging:
the **Aqua modes cannot be started when the battery level is above 97%**, as the exoskeleton will charge the battery in these modes.
Additionally
- **Boost mode** won't be activated when the battery is **below 50%**
- **Sport mode** won't be activated if the battery level drops **below 25%**

6 Contact Us

For any problems or complains, please contact us at:

Support@dnsys.ai